


OV1016 | Part No. 86042

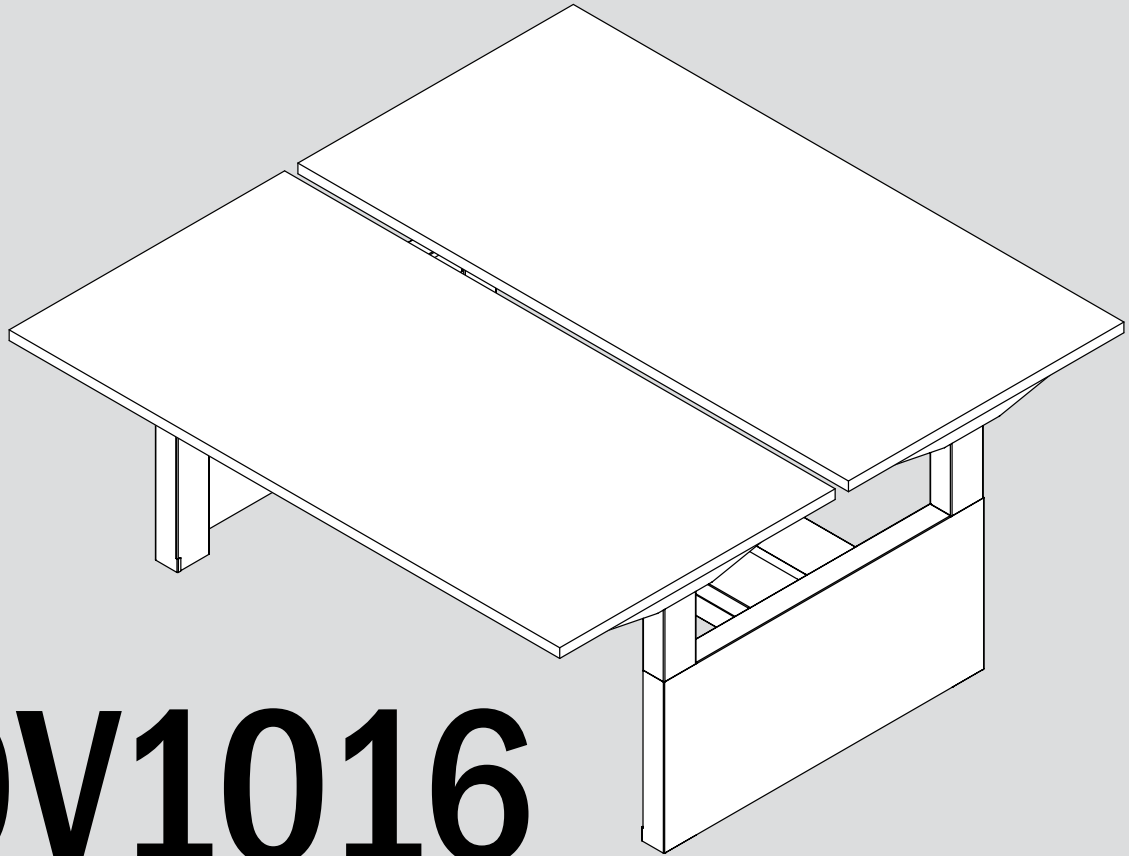


OV1016

HEIGHT ADJUSTABLE BENCHING SYSTEM

USER GUIDE

OV1016

HEIGHT ADJUSTABLE BENCHING SYSTEM

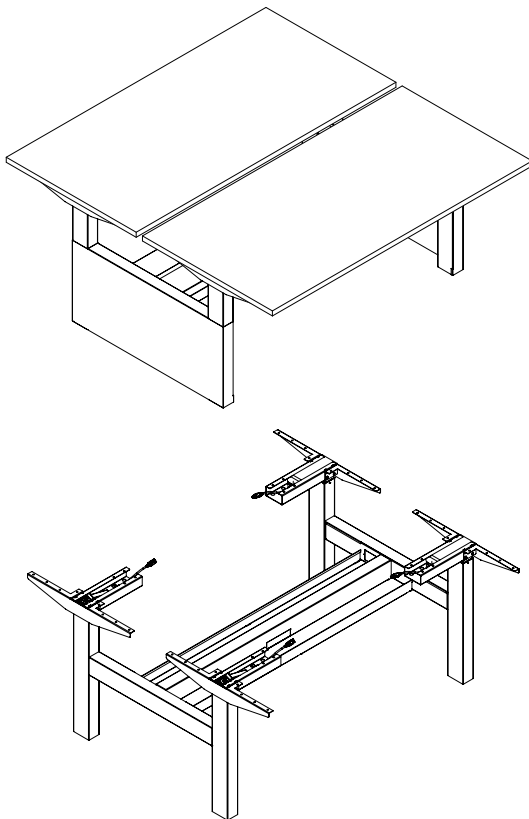

Our best-selling value table base is now available in a back-to-back benching system. OV1016 can convert your workspace into a more pleasing open plan, affording you an efficient use of space proven to increase collaboration at an unheard of price point.

Attractive, highly functional with built-in wire management and proven to be among the quietest in the industry... all reasons the OV1016 benching system is a top choice for your workspace needs.

FEATURES

- Back-to-back benching unit, full table bases (add your own work surfaces)
- Meets BIFMA X5.5 standards
- UL 962 approved
- Integrated wire management
- Holds up to 200 lb. per worksurface


TABLE OF CONTENTS

Parts Diagram	4
Safety Information	5-6
Assembly Instructions	7-13
Electrical Installation	14
Operation	15-16
Initialization and Reset	15
Handswitch Operation	15
Programmable Handswitch Operation	15
- Change the Height Unit	16
- Adjust Height Display	16
- Save Memory Position	16
- Recall Memory Position	16
Troubleshooting	17-18
Unit Errors	17
Handswitch Errors	18
Technical Data	19
Customer Service	19
Standards & Certifications	19

This manual explains how this sit-stand desk is assembled, used, and maintained. All sit-stand tables are subjected to functional and quality tests before leaving our facility.

OV1016

PARTS DIAGRAM

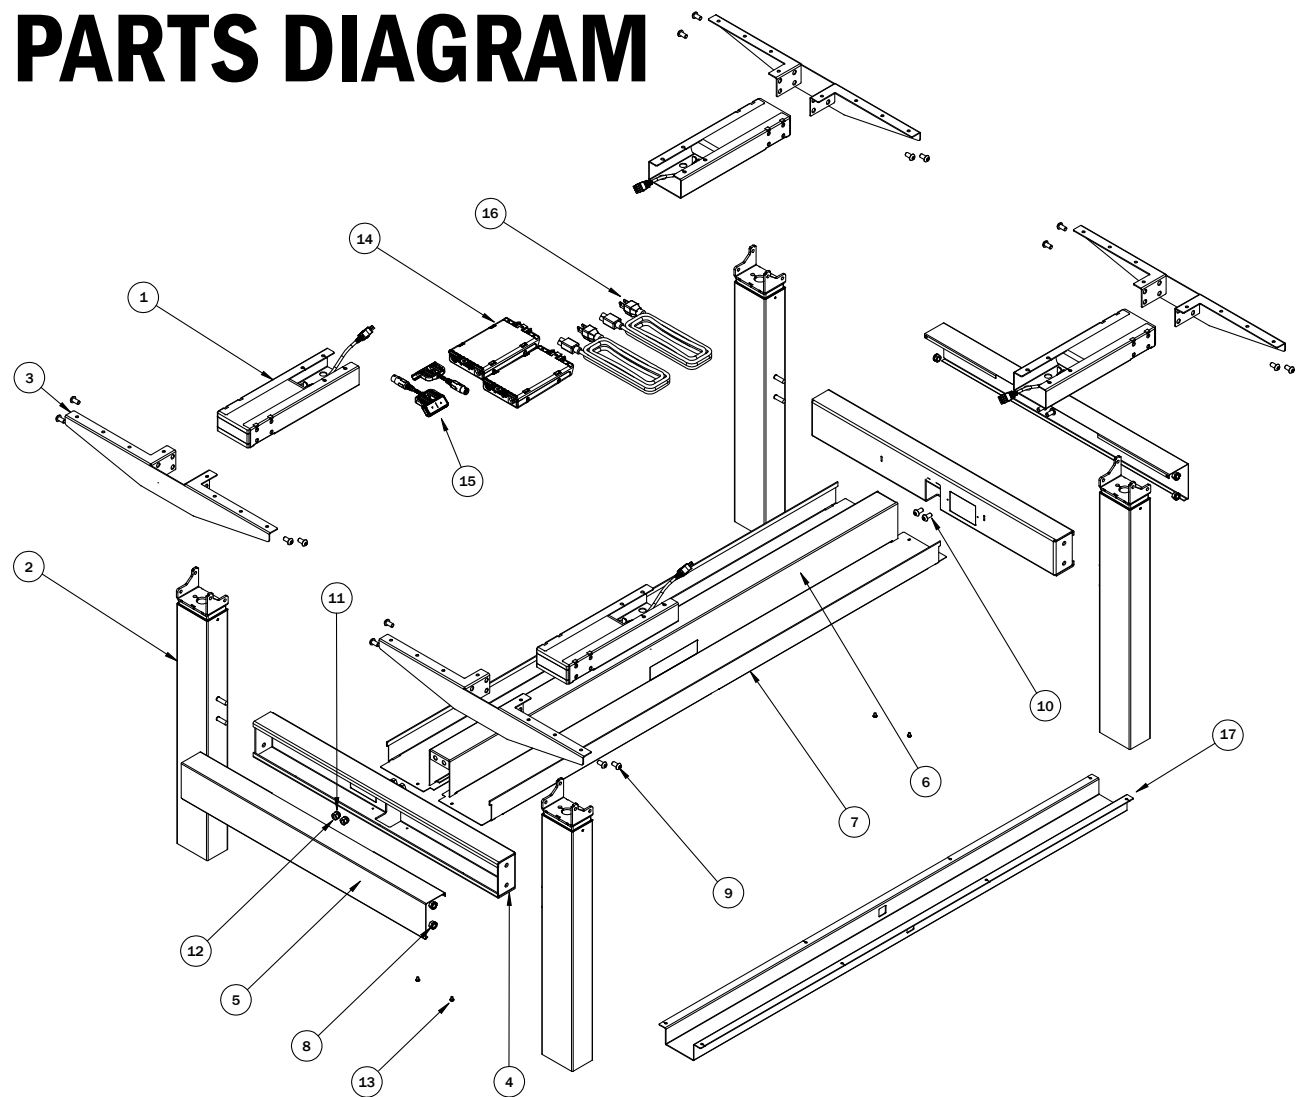

PARTS		Qty/Package		Qty/Package	
1.	Independent Beam	4	10.	M8-1.25x16mm Screw	4
2.	Column	4	11.	M8 Split Washer	4
3.	Top Support	4	12.	M8 Nut	4
4.	Ganging Bracket	2	13.	M4-0.7x6mm Screw	4
5.	Cover	2	14.	Control Box	2
6.	U-Channel	1	15.	Handswitch	2
7.	Cable Tray	1	16.	Power Cord	2
8.	M8-1.25 Tooth Lock Washer Nut	4	17.	HAT Channel	2
9.	M8-15x12mm Screw	16	(for tables equal or greater than 72")		

SAFETY INFORMATION

IMPORTANT SAFETY INSTRUCTIONS *Save these instructions.*

DANGER To reduce the risk of electric shock:

Always unplug this furnishing from the electrical outlet before cleaning.

WARNING: To reduce the risk of death, serious injury, or property damage, read and follow this safety information and the provided instructions when assembling this product. Do not change or replace components and accessories provided by OMT-Veyhl.

INSTALL ONLY APPROVED WORK SURFACES

This table system does not include a work surface (desktop). Work surface must be at least $\frac{3}{4}$ " thick and weigh no more than 5 lb. per square foot (For example, a 2'x6' desktop should weigh no more than 60 lb). Do not exceed a maximum weight for the desktop of 75 lb. To prevent table from tipping or collapsing, make sure the desk frame is not overloaded by the weight of tabletop and objects you plan to put on the table. If you are unsure, contact customer service.

KEEP AWAY FROM CHILDREN


This table system is not designed for use in homes or other areas accessible by small children. For indoor commercial office use only.

BE CAREFUL WHEN ADJUSTING DESK HEIGHT

Body parts and property can be caught between the moving work surface and an immobile obstacle (such as shelves, furniture, window sills, or walls). Keep at least one inch of clearance around desk and make sure nothing is in table's path for its entire range of motion.

Before raising or lowering:

- Check surroundings on all sides of desk are clear
- Make sure corded objects will not be pulled off table or cause other objects to fall
- Make sure desk power cord moves freely as desk moves up and down

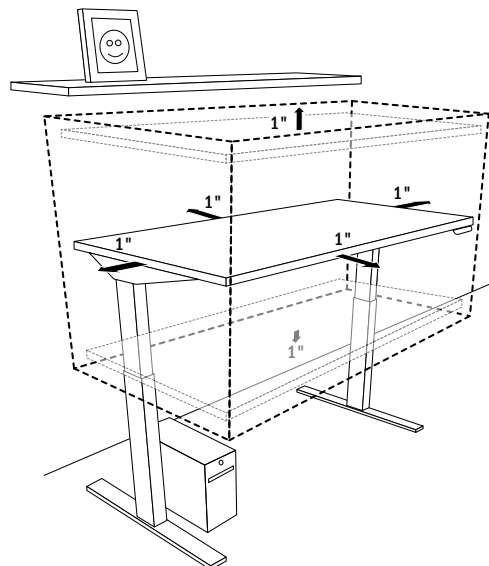

DO NOT OVERLOAD DESK

To prevent table from tipping or collapsing, make sure the desk frame is not overloaded by the weight of tabletop and objects on table. Evenly distribute load; excess loads near edges can reduce stability and lead to tip over.

- Do not exceed maximum load (including weight of desktop) of 200 lb. (91Kg) for two-leg configuration, and 250 lb. (113 Kg) for three-leg configuration
- Do not exceed edge load of 25 lb. when positioning monitors or mounting accessories.
- Do not sit or stand on table

USE CARE WHEN MOVING DESK

- Clear objects and equipment from table before rolling to reduce the risk of tipping over.
- Adjust the desk to its lowest height before moving
- To disconnect, turn all controls to the off position, then remove plug from outlet
- Do not move a loaded desk
- Do not lift the desk by the work surface (desktop)

DO NOT OPEN ELECTRICAL COMPONENTS

Do not attempt to service table components. There are no user-serviceable parts inside the motor control units or table legs. If your table needs service, contact customer service. Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged. Return the furnishing to a service center for examination and repair.

KEEP TABLE FRAME DRY


Keep all electrical components away from water and high humidity. Clean only with a dry or slightly damp cloth. Do not spray cleaning solutions directly onto table system.

GROUNDING INSTRUCTIONS

This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. **Use only the cord provided.** Make sure that the product is connected to an outlet having the same configuration as the plug (as shown in Illustration A) that is properly installed and grounded in accordance with all local codes and ordinances.

Do not modify the plug provided with the product – if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

No adapters are to be used with this product.
Keep cord away from heated surfaces.

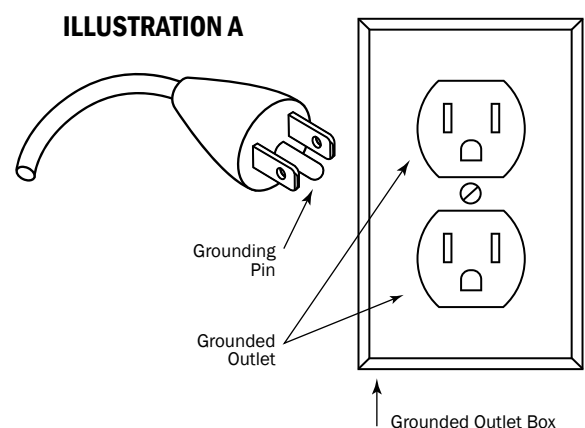

ASSEMBLY INSTRUCTIONS


The assembly of the table frame to be made in accordance with this manual.
Changes to the table frame or improper use may affect the safety, function, and life of your product.

*This manual is for all sit-stand tables from the OV1016 series.
Due to different models or types, pictures may vary.*

ASSEMBLY OVERVIEW



1. Assemble the ganging bracket
2. Assemble the top support to the beam and column
3. Assemble the cable tray
4. Fasten the wire management to the ganging brackets
5. Snap on the ganging bracket covers
6. Fasten the table frame on to the table top
7. Fasten the control box and handswitch to the table top
8. Connect the motor cables to the control box
9. Connect the handswitch (HS) cable to the control box
10. Connect the supplied power cord (AC) to the control box
11. Attach all cables to the table frame or the underside of the table top
12. Connect side-by-side benches

If you have any difficulty assembling this unit, or need to order replacement parts, please contact our Customer Service department.
Use the parts diagram on page 4 as a reference.

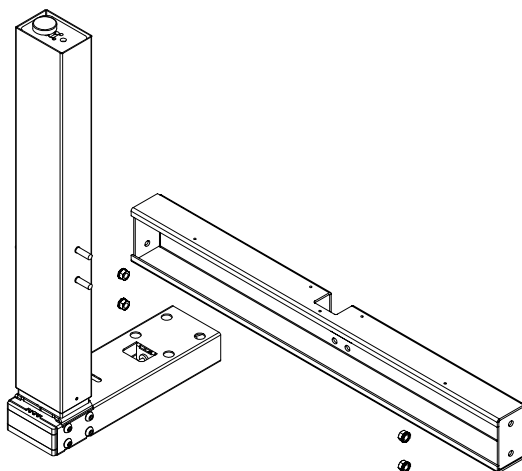

1 ASSEMBLE THE GANGING BRACKET

Assemble using the M8-1.25 Tooth Lock Washer Nut (2 per column). The maximum tightening torque for these nuts is 15.8Nm (10 ft-lbs). Repeat for remaining columns.

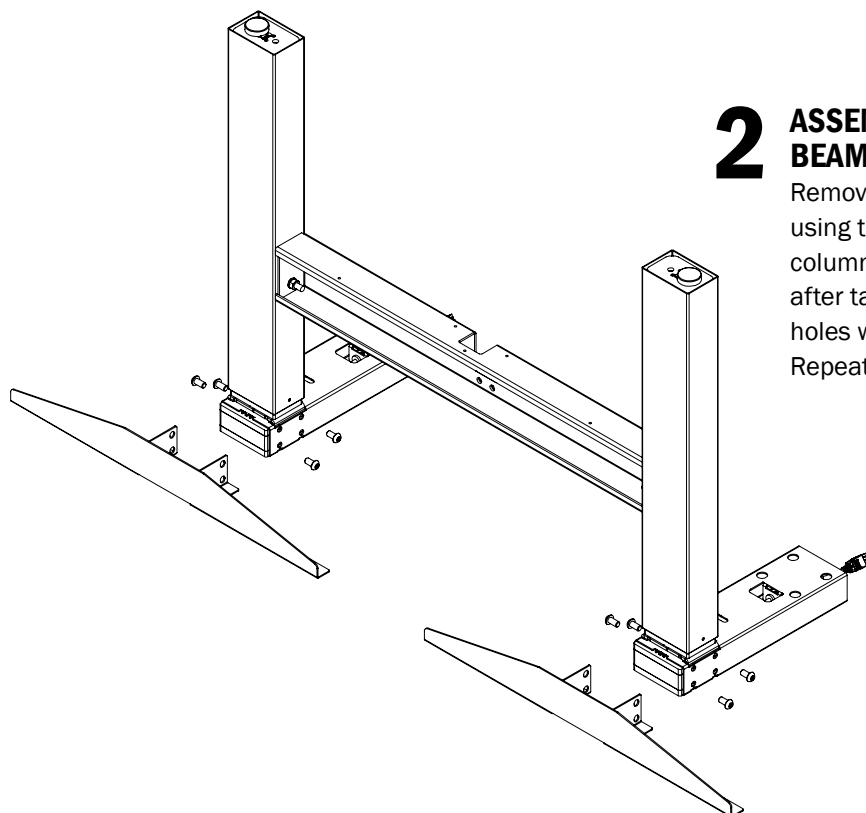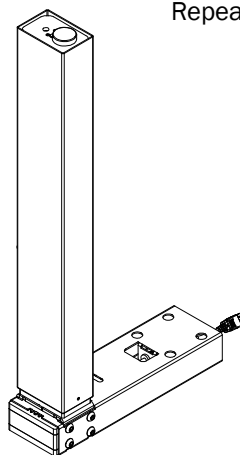

2 ASSEMBLE THE TOP SUPPORT TO THE BEAM AND COLUMN


Remove tape from column assembly. Assemble using the M8-1.25 x 12mm length screws (4 per column). Hand-tighten only (do not torque until after table top is attached). Align top support holes with independent beam assembly. Repeat for remaining columns.

3A (FOR ELECTRICAL SYSTEM UPGRADE ONLY) ASSEMBLE ELECTRICAL

See page 14


3B ASSEMBLE THE CABLE TRAY

Align and insert the tabs on the u-channel into the tray. Squeeze the u-channel so that all tabs are secured into the tray.

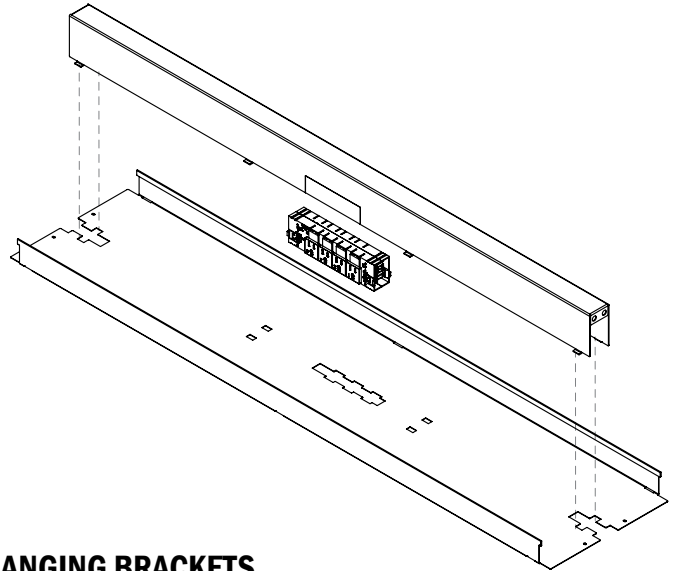

4 FASTEN THE CABLE TRAY ASSEMBLY ONTO THE GANGING BRACKETS


Attach the tray to the ganging brackets using the M4-0.7x6mm length screws. The maximum tightening torque for these screws is 4Nm (35 in-lbs). Attach the u-channel to the ganging bracket using the M8-1.25x16mm length screws, M8-1.25 nut, and M8 lock washer (2 per ganging bracket). The maximum tightening torque for these screws is 20Nm (14.8 ft-lbs). A socket wrench is recommended for this step to hold the nut in place. Repeat for both sides.

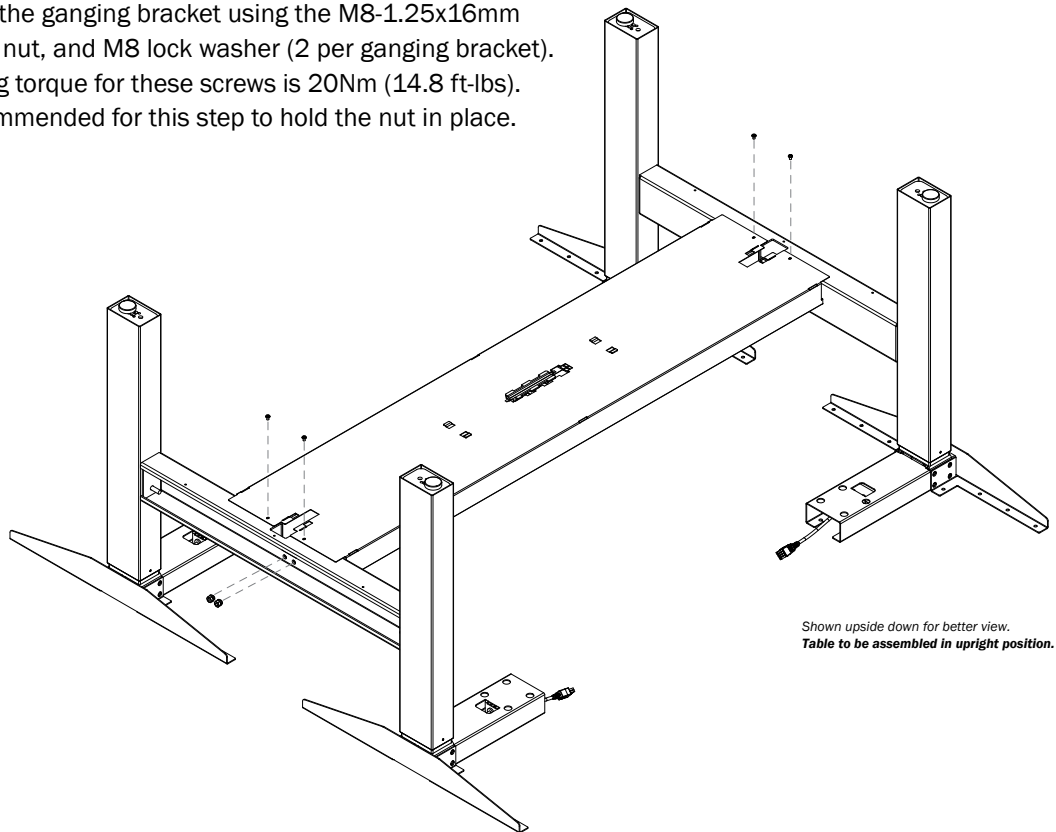

*Shown upside down for better view.
Table to be assembled in upright position.*

5 SNAP ON THE GANGING BRACKET COVERS


The covers will self-secure when snapped on to the ganging brackets.

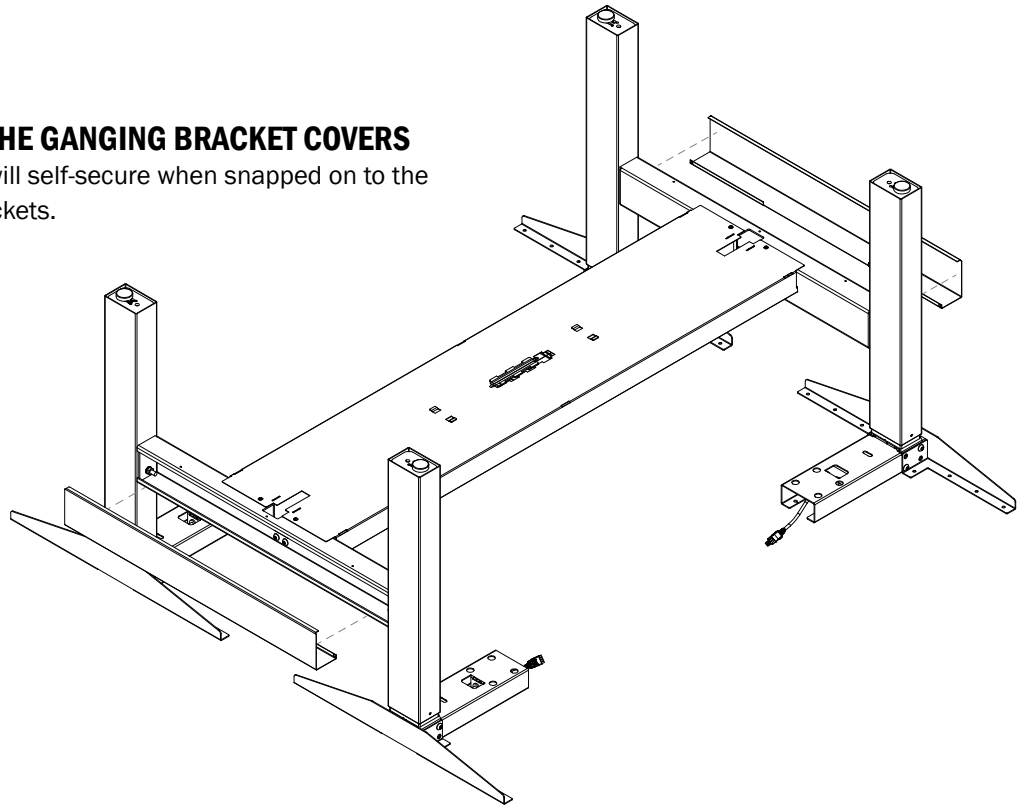

6 FASTEN THE TABLE FRAME ONTO THE TABLE TOP*


Attach table frame onto the table top, making sure that the legs are perpendicular to the table top. **Be sure to use approved screws per the table top supplier.** Once the table top is attached, torque the hand-tightened screws in the top support. The maximum tightening torque for these screws is 24Nm (18 ft-lbs).

*Shown upside down for better view.
Table to be assembled in upright position.*

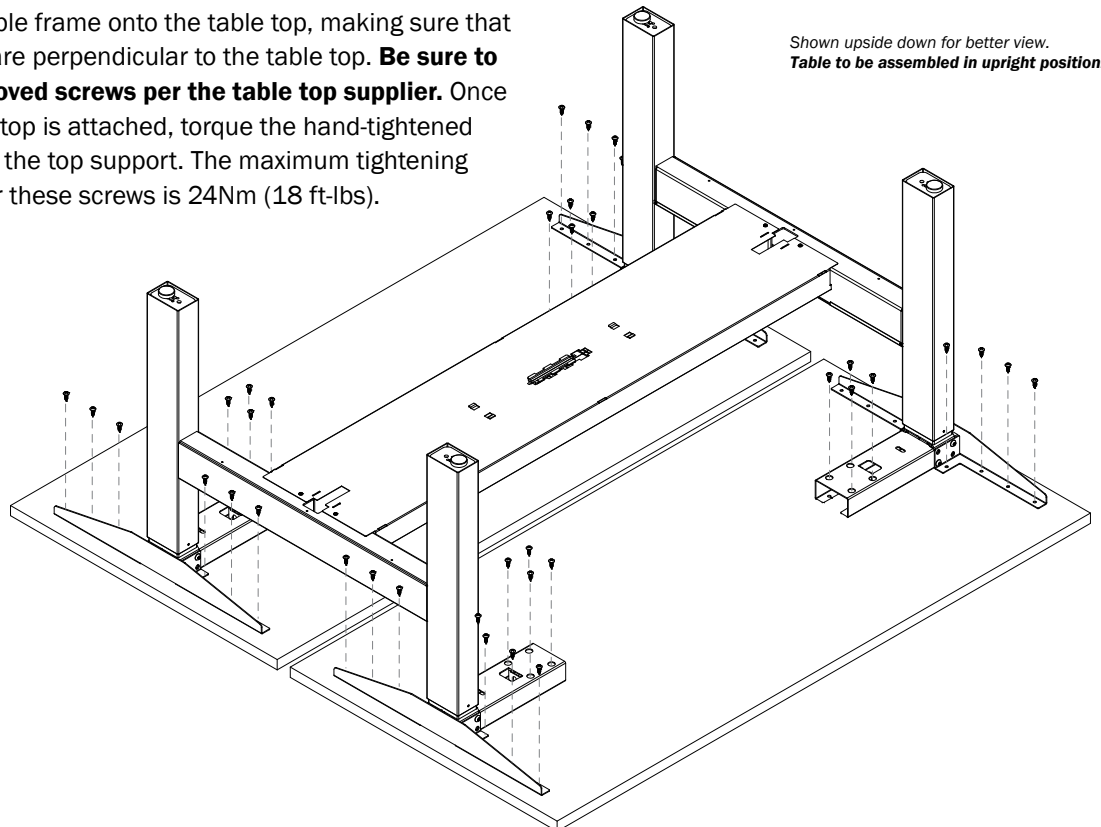


6B (FOR TABLES EQUAL OR GREATER THAN 72") ATTACH THE HAT CHANNEL


Feed the motor cables through the HAT channel cut out.

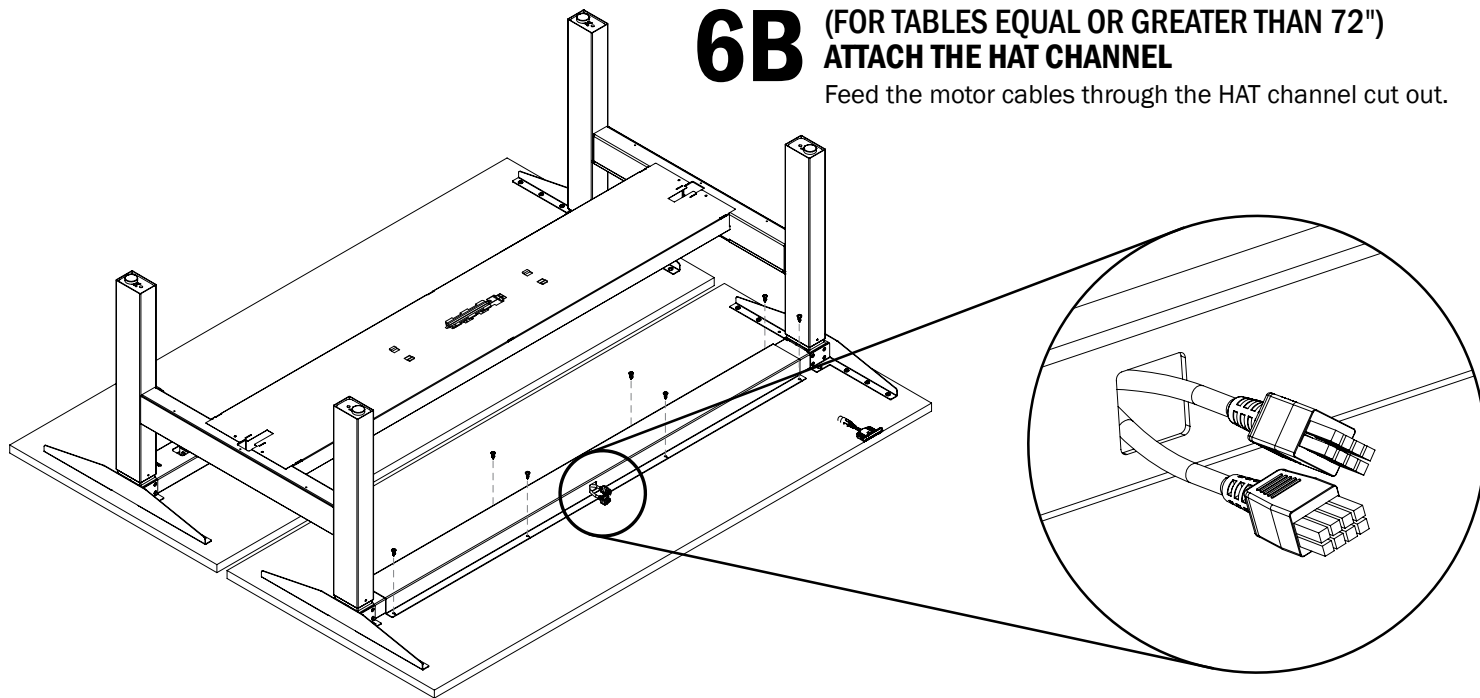

7 FASTEN THE CONTROL BOX AND HANDSWITCH TO THE TABLE TOP

Make sure the control box and handswitch are fastened in a location where all the cables will connect without being in tension. Be sure to use approved screws per the table top supplier.

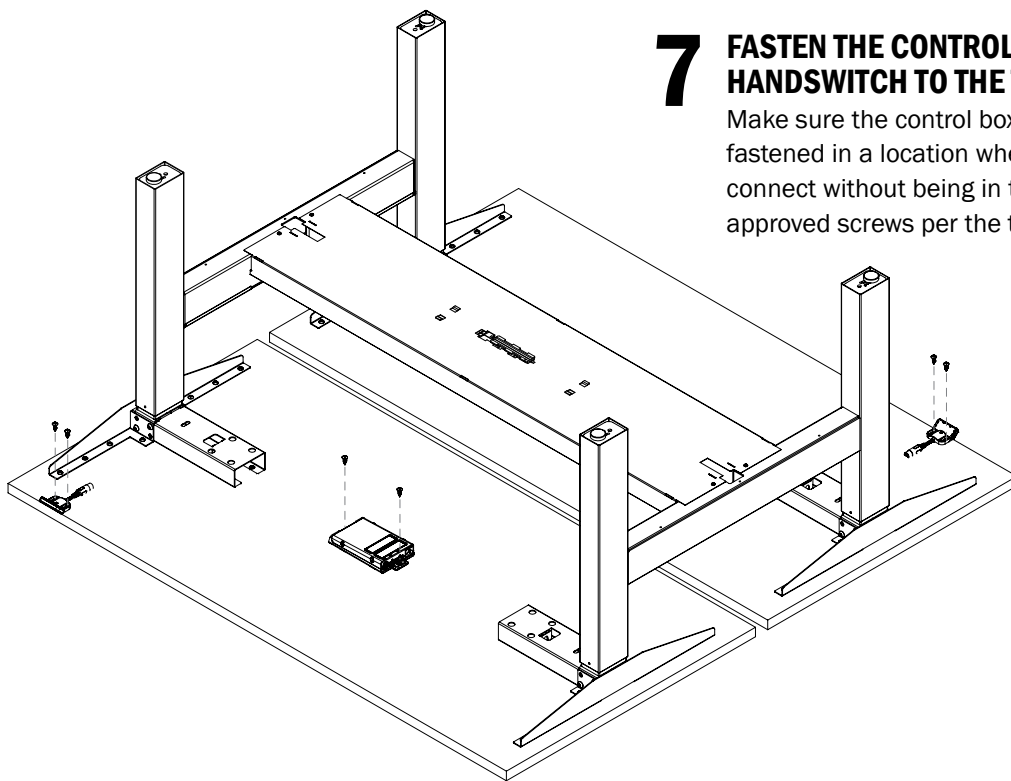

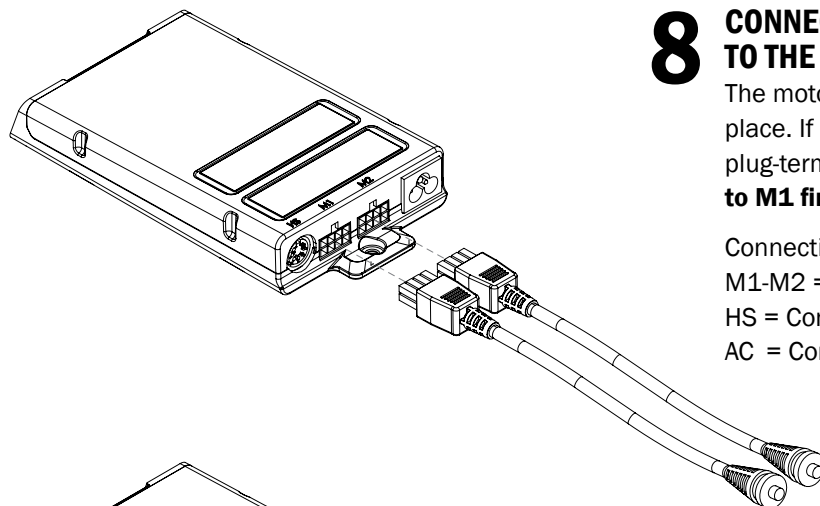

8 CONNECT THE MOTOR CABLES TO THE CONTROL BOX


The motor cable plug-connection has to click into place. If a control box is used which has more plug-terminals than needed, **you have to connect to M1 first.** (The extra terminals can be left open.)

Connections to the control box:


M1-M2 = Connectors for the columns

HS = Connectors for the handset

AC = Connector for the power cord (3-pin)

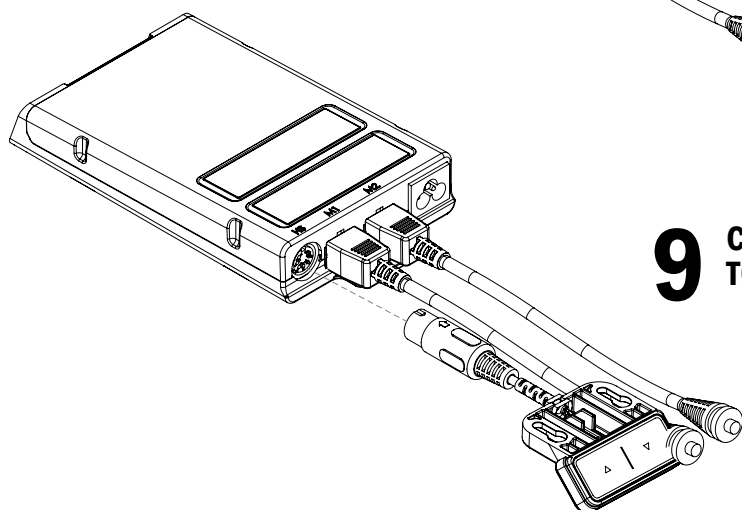

9 CONNECT THE HANDSWITCH (HS) CABLE TO THE CONTROL BOX

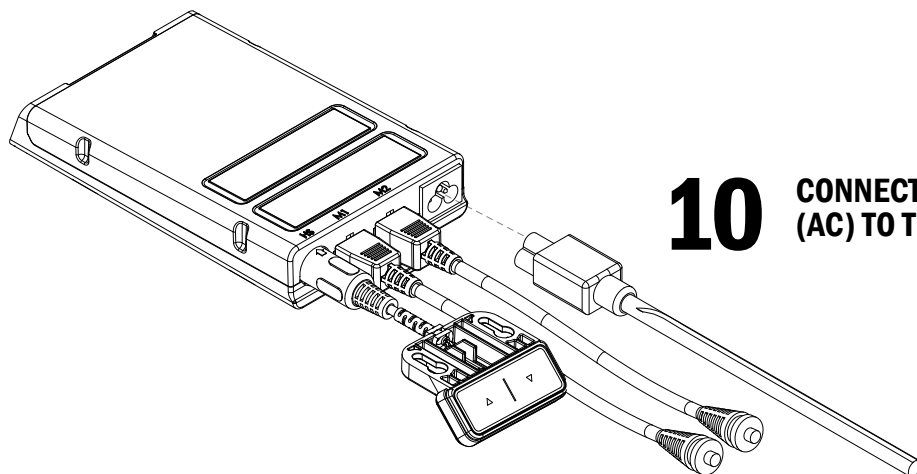

10 CONNECT THE SUPPLIED POWER CORD (AC) TO THE CONTROL BOX


11 ATTACH ALL CABLES TO THE TABLE FRAME OR ON THE UNDERSIDE OF THE TABLE TOP

Attach cables in order to avoid any damage during operation.

Be sure to leave enough slack in the cables to allow for the table to move into it's highest position.

12 CONNECT SIDE-BY-SIDE TABLES*

*For units specified to use a side-to-side connector, attach lower tray to the bottom of the ganging bracket of each bench using the M4-0.7x6mm length screws. The maximum tightening torque for these screws is 4Nm (35in-lbs). Once installed, the upper tray can be slid on to fit.

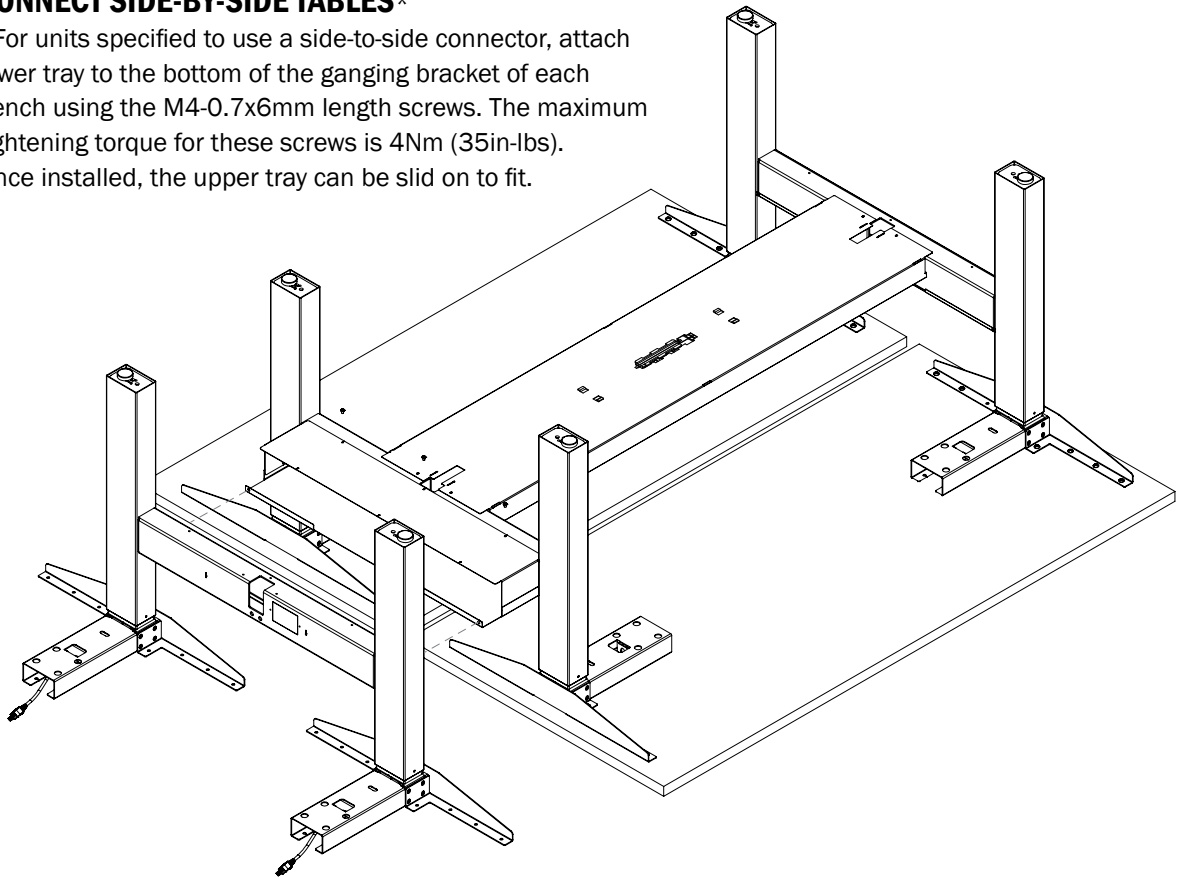


ELECTRICAL INSTALLATION

(FOR TABLES ORDERED WITH THE ELECTRICAL SYSTEM UPGRADE)

INSTALL SIMPLEX RECEPTACLES INTO POWER BLOCK

Insert terminals into corresponding slots in block and seating receptacle until catches engage on both sides of receptacles.

Note: a noticeable “snap” will be heard when receptacle is fully engaged into block. Ensure terminals go directly into slots and do not get inserted into an adjacent slot.

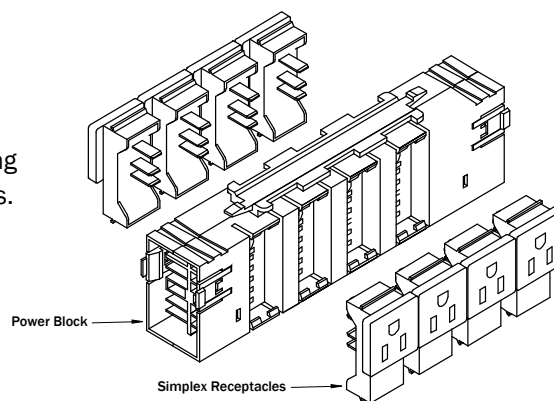


CONNECT CABLES TO BLOCK

Connect as required (not shown). Ensure cables are completely seated under cable latches and into block. Power disruption may occur if cables are not fully seated into block.

INSTALL POWER BLOCK INTO TRAY

Place the power block into the provided cut-out in the tray and slide the block to lock it into place.

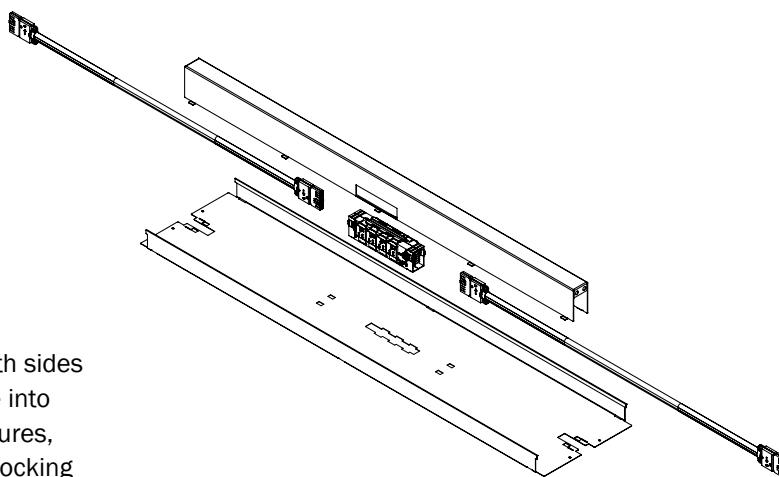


INSTALL U-CHANNEL TO TRAY

Remove the punch-out features from both sides of the u-channel. Power block will wedge into the channel between the punch out features, secure by squeezing the u-channel and locking the tabs into the tray.

For Simplex Receptacle Removal

Insert ends of Simplex removal tool into slots above and below receptacle (shown) and push firmly into block until it catches on tool, snap over receptacle edges. Pull receptacle tool and receptacle straight out of the block. Note: Simplex removal tool sold separately.

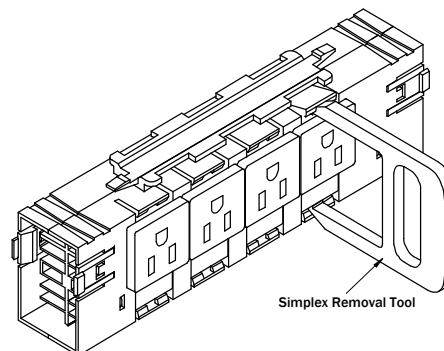

OPERATION INFORMATION

INITIALIZATION/RESET

The desk may need to be initialized/reset after any of the following:

- After assembly
- After disconnection from the power supply
- After any impact on the table top.

To initialize/reset, you will need to move the table to the lowest position by holding the DOWN button of the handswitch until all columns reach the lowest position. Then press the DOWN button again and hold it pressed for five seconds or until a slight movement of the table drops down to the machine zero point and back up to the operation zero point. Once the table stops moving, release the DOWN button. If the button is released too early, this leads to a malfunction of the table and you must repeat the reset process.


The upper height position is programmed into the control box. For this reason, only use the control box that has been provided with the specific table frame. **Under no circumstance should a control box from one table be moved to another.**

NORMAL HANDSWITCH OPERATION (for all handswitch types)

By pressing the UP or DOWN buttons, the table will move up or down to the desired position. Once the desired position is reached, let go of the UP or DOWN button. The table will stop once it reaches the lower or upper height position.

PROGRAMMABLE HANDSWITCH OPERATION (optional)

This programmable handswitch is equipped with a display for showing the current table height in centimeters or inches.

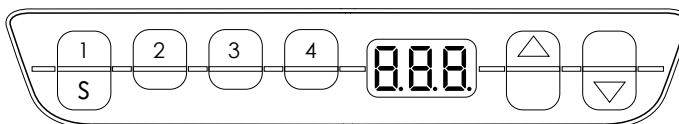

The handswitch also will display an error code if an error is detected by the control box. When an error is detected, the display will show an error code “EXX,” instead of the current table height. To resolve the error, see the Troubleshooting Section (p. 17-18 of this guide).

The programmable handswitch also has the ability to save up to four different height positions.

PROGRAMMABLE HANDSWITCH OPERATION (continued)

CHANGE THE HEIGHT UNIT (inches or centimeters)

The height display of the handset can display either centimeters or inches. With the help of the S5-menus, the unit can be changed. If the display was originally set to centimeters, then after the procedure noted below it will change to inches or vice versa.

To change the unit, follow these steps:

1. Press and hold the 1, 2, and UP buttons for 5 seconds until the display shows "S 5".
2. Confirm by pressing the "S" button. Now the display will have changed.

To exit the menu without making a selection, wait approximately 10 seconds until the height display appears again.

ADJUSTMENT OF THE HEIGHT DISPLAY

If the indicated value does not match the actual height of the table top, the display can be corrected as follows:

1. Press and release the "S" button.
2. Press and hold the DOWN button for 5 seconds until the display starts to flash.
3. Measure the table height and enter the measured value (depending on the setting in centimeters or inches) with the UP or DOWN button. Confirm the entry by pressing the "S" button.

To exit the menu without making a selection, wait 10 seconds and the height display will appear again.

SAVE MEMORY POSITION

Drive the table up or down to the desired height. Press the "S" button (in the display "S -" is shown.) Select a position by pressing on any of the four number buttons, 1-4, (the display will show the setting as "S1").

The save position procedure is confirmed by the control box with a double click sound. After approximately 5 seconds, the display shows the current table height. Repeat steps to save a maximum of four different positions.

RECALL MEMORY POSITION

Press and hold the desired memory location button (1, 2, 3 or 4) and the table moves independently from the current position into the saved position. The button must be pressed until the position is reached. If the button is released, the table will stop short of the desired height.

TROUBLESHOOTING

UNIT

ERROR CODE	SOURCE	SOLUTION
Table does not move	No power supply	Plug in the power cord or check the connection on the control box
	No connection or a loose connection to the drives	Verify the plug connections of the motor cable to the control box
	No connection or a loose connection to the handswitch	Verify the plug connections of the motor cable to the control box
	Max lifting capacity is exceeded	Reduce the weight or load on the desktop
	Max time limit is exceeded	Control is activated automatically after approx. 9 minutes
	Defective drive	Contact customer service
	Defective control box	Contact customer service
	Handset is defective	Replace the handset
Table moves down at a slow rate	Control box expects new reset	Reset control box. (See page 15)
During operation, tables moves at a slow rate	Max lifting capacity is exceeded	Reduce weight
Table moves on one side only briefly and then stops	No connection or a loose connection to the drives	Verify the plug connections of the motor cable to the control box and reset the control box
	Defective drive	Contact customer service

HANDSWITCH DISPLAY

ERROR CODE	SOURCE	SOLUTION
HOT	The control box monitors the duty cycle (time-controlled) and its max temperature. A value has been exceeded.	Wait until the "HOT" display goes out - the table is working properly again
E00	M1 – Internal Fault	Unplug and contact customer service
E01	M2 – Internal Fault	
E02	M3 – Internal Fault	
E12	M1 – Defect	Unplug. Correct the external short circuit and/or verify the cable to the drives. Plug cables into the control box and re-run table.
E13	M2 – Defect	
E14	M3 – Defect	
E24	M1 – Overcurrent	Collision → resolve if necessary
E25	M2 – Overcurrent	Max load exceeded → remove excess load from the table
E26	M3 – Overcurrent	If the problem still exists, please contact customer service
E36	M1 – Not connected	Motor not connected. Check cable / connector to the drive. Reset the table (see page 15).
E37	M2 – Not connected	
E38	M3 – Not connected	
E48	Overcurrent drive 1	Collision → resolve if necessary
E49	Overcurrent drive 2	Max load exceeded → remove excess load from the table
E55	Drive 1 - Synchronization is lost	If necessary, reduce the load on the table
E56	Drive 2 - Synchronization is lost	Reset the table (see page 15).
E60	Collision identified	Option ISP function. Remove source.
E61	Drive replaced	The connection to the drive is interrupted or a new drive is connected. Reset the table (see page 15).


If it is not possible to resolve an error as described, disconnect the power cord, wait a few minutes and reset the table again. If the error still occurs, remove the table from the power source and contact customer service.

(Error Code list is valid from firmware 1.7.5 and higher)

TECHNICAL DATA

GENERAL CONTROL BOX	
Power supply	120 VAC $\pm 10\%$ / 60 Hz
Standby power consumption, primarily	<0.3 W
Operating temperature	0-35 °C
Protection class	IP 20
Maximum power output	216VA/24V
TWO-COLUMN FRAME WITH CONTROL BOX	
Maximum lift capacity	200 lb (≈ 90 kg / 890N)
Adj. range, depending on version	View Illustration B
Maximum input current	5 A
Maximum duty cycle	10% (2 min. on / 18 min. off)

ILLUSTRATION B

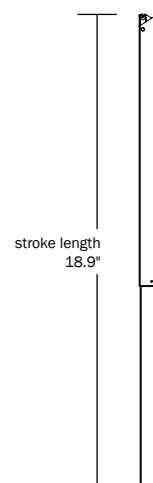

CUSTOMER SERVICE

If you have any problems with your table base, please contact our service department.

PHONE: 1-616-738-6688

FAX: 1-616-738-6682

STANDARDS & CERTIFICATIONS

The drive system is tested according to the following standards:

UL 962

Issued: 2014/11/07

Ed: 4 Household and Commercial Furnishings

CSA C22.2#68

Issued: 2009/09/01 Ed: 7 (R2014)

Motor-Operated Appliances (Household and Commercial);

Gen. Inst. No.1: 2010, Gen. Inst. No.2: 2010

Meets 2014 BIFMA standards.

WARRANTY

**CONTACT YOUR SALES REPRESENTATIVE
FOR WARRANTY INFORMATION**


INTERTEK LISTING BELONGS TO:

System: Clever Bench

OMT-Veyhl USA

11511 James Street

Holland, MI 49424

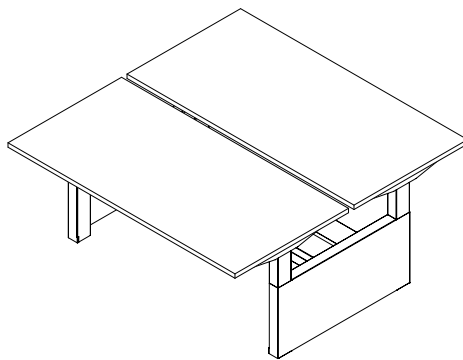

OV1016

USER GUIDE

Part No. 86042