

ASSEMBLY INSTRUCTIONS: DOUBLE T

The assembly of the table to be made in accordance with these instructions. Changes to the table frame or improper use may affect the safety, function, and life of your product.

These instructions are for installation of the following SimplyFast products:
Tube Leg: Double T Configuration

1 USING TABLE 1 AND FIGURE 1, MARK THE POSITION OF THE CORNER HOLE

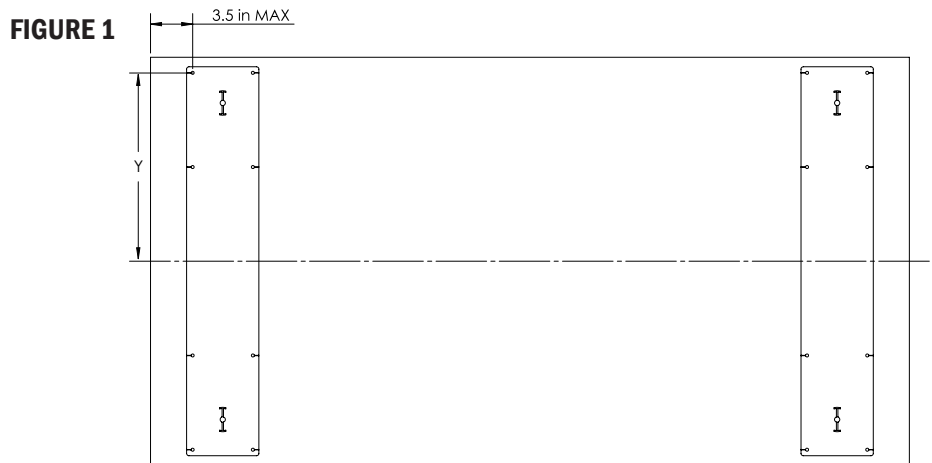


TABLE 1: Y DIMENSION (SEE FIGURE 1)

| | | WORKSURFACE DEPTH (IN) | | | | | | | | |
|-------------------|-------|------------------------|-------|-------|-------|-------|-------|-------|-------|-------|
| | | 32 IN | 34 IN | 36 IN | 38 IN | 40 IN | 42 IN | 44 IN | 46 IN | 48 IN |
| NOMINAL FOOT SIZE | 32 IN | 10.63 | 10.63 | | | | | | | |
| | 36 IN | | | 12.64 | 12.64 | 12.64 | | | | |
| | 42 IN | | | | | | 15.64 | 15.64 | 15.64 | 15.64 |

2 USING THE TOP PLATE AS A TEMPLATE, MARK THE REMAINDER OF THE HOLES

Maximum Worksurface Dimensions:
 32" Leg - 34" Worksurface
 36" Leg - 40" Worksurface
 42" Leg - 48" Worksurface

3 DRILL A 3/32" PILOT HOLE IN THE LOCATIONS MARKED IN STEPS 1 AND 2

4 INSTALL THE SUPPLIED SCREWS THROUGH THE MOUNTING PLATE AND INTO THE TOP

Terms of Use: The user is responsible for determining the suitability of SimplyFast products for specific applications.